

COOKING **collection**

Microwave Trim Kit

**Instructions for Use
Installation and Warranty Details**

**MWTK1S
MWTK2W
MWTK3B
MWTK4S**

 **KLEENMAID** **St George**

Congratulations on the purchase of your new Kleenmaid appliance. This appliance has been designed and manufactured to give you years of reliable performance.

For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service calls.

Once installation is complete, read this booklet and get to know the controls and the features of your new appliance.

**If you need further information call
131308**

We reserve the right to alter the specifications with no influence on the operation of the appliance. This instruction manual cannot be reason for claim.

TABLE OF CONTENTS

Features & Benefits.....	2
Cleaning & Maintenance.....	2
Cutout Dimensions.....	2
Installation Integrated Flush.....	3–4
Installation Trim Exposed.....	5–6
Warranty Terms & Service.....	7

FEATURES & BENEFITS

The Microwave Trim Kit is for use with mid size microwaves or other selected microwaves with appropriate physical dimensions. Self-assembly is simple, just open the microwave oven door and pull the trim out or snap it back in for refitting.

CLEANING MADE SIMPLE

Black & White Trim Kits

The surface of the Trim kit is powder-coated paint. Do not use harsh abrasives when cleaning. Simply wipe the surface with a clean cloth, warm water and a mild detergent.

STAINLESS STEEL TRIM KITS

When cleaning stainless steel surfaces we recommend 3Mbrand or Advance (by Cleveland Cleaning Supplies) stainless steel cleaner. Other reputable brand cleaners specifically formulated for cleaning stainless steel may also be acceptable. Do not use steel soap pads or abrasive scourers of any kind. The abrasive qualities of these pads will ruin the even brushed finish of the stainless steel and any residual metal fibres may corrode causing a rusty/dull appearance. Metal polishes with abrasive qualities are also not recommended.

INSTALLATION DIAGRAMS & INSTRUCTIONS

WARNING: Ensure all aspects of the installation conform with the requirements of the local electrical utilities and the local government building by-laws.

Parts Supplied

1. Fully assembled front surrounds – 1 part plus two mounting bars
2. Four securing screws
3. Two timber mounting blocks

Installation Recommendations

Installation can be made in either of two ways: -

- a. "Integrated Flush" method (see Fig 1 & 2)
- b. "Trim exposed" method (see Fig 4 & 5)

We recommend method (a).

MEASUREMENT CHART

Installation Method	Cut-Out Dimensions		
	H	W	D
Flush	385	600	500
Trim Exposed	363	569	500

MICROWAVE INSTALLED BY ITSELF

("Integrated Flush")


1. Mark out cutout positions (Fig 1 & 2) ensuring sufficient depth is available as shown
2. Fit baseboard with two bearer blocks positioned as (Fig 1 & 2) to suit microwave.
3. Position Microwave on blocks and plug in power cord to suitable power point.
4. Position surround to line-up with Microwave allowing equal clearance on all four sides.
5. Fix the two mounting bars to the front fascia with four screws supplied.
6. Position front section of trim to the mounting bars and press onto locater clips.

MICROWAVE INSTALLED OVER WALL OVEN

("Integrated Flush")

1. Mark out cutout as Fig 3 ensuring sufficient depth is available (Fig 1 & 2)
2. Mark out Wall Oven cutout according to model number setting heights of both cutouts to suit your own requirements.
3. Build up an enclosure box with open top as Fig 2 and fit bearer blocks positioned as shown in Fig 1, 2 & 3.
4. Position microwave on blocks and plug in power cord to a suitable power point.
5. On Wall Ovens with top flue outlet an angled flue extension is required to allow the flue pipe to be offset. This extension must give the maximum possible angle without coming into contact with combustible material (see Fig 3) **or** position a non-combustible heat shield as shown in Fig 2 (ie metal spaced off from timber by 15mm).

INTEGRATED FLUSH TO CUPBOARD FASCIA

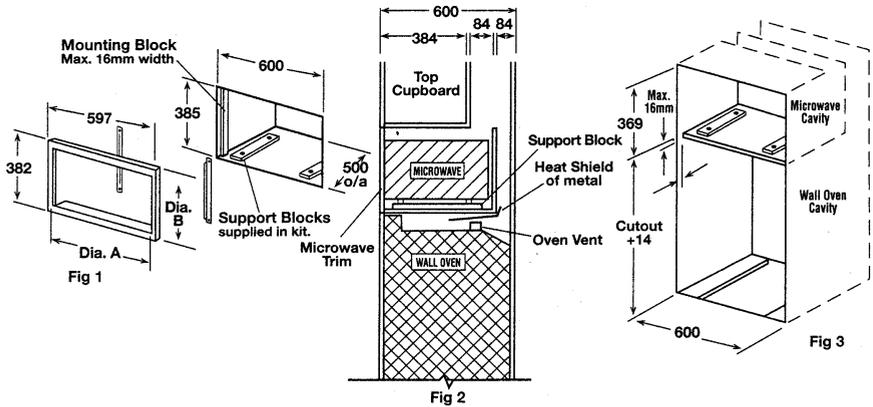

This diagram shows the dimensions that must be used when installing a Microwave above a St George Oven.

Model	Dim A	Dim B
MWTK1S	570mm	298mm
MWTK2W	570mm	298mm
MWTK3B	570mm	298mm
MWTK4S	550mm	305mm

Microwave cavity must be rear vented. It is essential that airflow be allowed From above the microwave and oven Unit into room or roof space.

The microwave trim kit must be installed in compliance with installation instructions supplied in this kit. Failure to comply will **void the manufacturers** warranty of the microwave.

MICROWAVE INSTALLED BY ITSELF

(“Trim Exposed”)


1. Mark out cutout position (Fig 4 & 5) ensuring sufficient depth is available as shown.
2. Fit baseboard with two bearer blocks positioned as shown (Fig 4 & 5)
3. Position microwave on blocks and plug in power cord to suitable power point.
4. Position surround to line-up with Microwave allowing equal clearance on all four sides.
5. Fix the two mounting bars to the front fascia with four screws supplied.
6. Position front section of trim onto the mounting bars and press onto locator clips.

MICROWAVE INSTALLED OVER WALL OVEN

(“Trim Exposed”)

1. Mark out cutout as Fig 6 ensuring sufficient depth is available (Fig 5)
2. Mark out Wall Oven cutout according to model number setting heights of both cutouts to suit your own requirements.
3. Build up an enclosure box with open top as Fig 5 and fit bearer blocks positioned as shown in Fig 4, 5 & 6.
4. Position microwave on blocks and plug in power cord to a suitable power point.
5. On Wall Ovens with top flue outlet an angled flue extension is required to allow the flue pipe to be offset. This extension must give the maximum possible angle without coming into contact with combustible material (see Fig 5) or position on non-combustible heat shield as shown in Fig 5 (ie metal spaced off from timber by 15mm).

TRIM EXPOSED INSTALLATION PROCEDURE

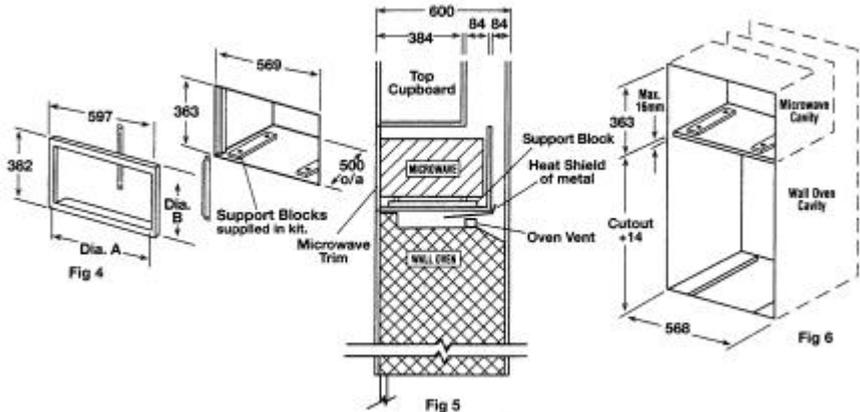

This diagram shows the dimensions that must be used when installing a Microwave above a St George oven.

Model	Dim. A	Dim. B
MWTK1S	570mm	298mm
MWTK2W	570mm	298mm
MWTK3B	570mm	298mm
MWTK4S	550mm	305mm

Microwave cavity must be rear vented. It is essential that airflow be allowed from above the microwave and oven unit into room or roof space.

The microwave trim kit must be installed in compliance with installation instructions supplied in this kit.

Failure to comply will void the manufacturers warranty of the microwave.

WARRANTY AND SERVICE

DOMESTIC WARRANTY - FULL FIVE YEAR WARRANTY

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - ONE YEAR WARRANTY

When this appliance is installed in a commercial application, you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction. The Consumer must make the appliance available for servicing and shall bear any costs incurred for any de-installation and/or re-installation required to make the appliance available for servicing. Kleenmaid St George is not liable for any consequential damage incurred during de-installation or re-installation.

WARRANTY DOES NOT COVER REPLACEMENT OF LIGHT GLOBES OR GLASS BREAKAGE DUE TO IMPACT

In case of fractured glass do not use your appliance.

WARRANTY REGISTRATION

Please complete the enclosed warranty card and retain it together with your proof of purchase document. These documents will need to be viewed by our Service Representative should you request in warranty service.

SERVICE ASSISTANCE

To assist you when phoning our After Sales Service number to arrange a service call please complete the following details and have them ready when you call.

Model Number _____ Date of purchase _____

Kleenmaid Store purchased from _____ Date of installation _____

KLEENMAID AFTER SALES SERVICE

1300 652 100

Other products in Kleenmaid St George
range of world's best appliances:

Washers

Dryers

Dishwashers

Ovens

Cooktops

Rangehoods

Sinks

Waste Disposal

Taps

Cookware

Refrigerators

Freezers

Vacuum Cleaners

**For sales information on the full range of quality kitchen and
laundry appliances, phone 13 13 08.**

For service related enquires, phone 1300 652 100

 KLEENMAID St George