

KLEENMAID

THE WORLD'S BEST

BY **SpeedQueen** USA.

Use and Care Guide and Warranty Model KAW793 Automatic Washer Two Speed Wash and Spin



D249IE3A

Full Five Year Warranty



Parts & Labour



KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the washer changes ownership, be sure this manual accompanies the washer.)

Part No. 37006R3
10/96

Congratulations on your purchase of a new Automatic Washer. Your washer has been carefully constructed for years of dependable service, using many of the same rugged, reliable components which are in many coin-operated machines.

Table of Contents

Important Safety Instructions	3
Before Washing	
Prepare Wash Load	5
Sort	5
Pretreat	5
Loading the Washer	
Load Articles	6
Load Sizes	6
Water Level	6
Water	
Water Hardness	7
Iron	7
Wash Temperature	7
Laundry Tips	8
Washing Temperature Guide	9
Bleach Dispenser	9
Fabric Softener Dispenser and Agitator	9
How To Use Your Washer	
Determine Proper Cycle	10
To Wash Clothes	10
Timer	11
Options	11
Special Care	
Starching	12
Knits	12
Permanent Press	12
Washing Special Items	13
Washing Problems	14
Stain Removal	15
Maintenance	
Cold Weather Care	18
Care Of Your Washer	18
Operating Tip	
Out-Of-Balance Switch	18
Motor Overload Protector	18
Before You Call For Service	19
If Service Is Required	19
Warranty	20
Timer Chart	21
Information For Handy Reference	Back Cover

▲ WARNING

**FOR YOUR SAFETY
and to reduce the risk of fire or an
explosion, do not store or use
gasoline or other flammable vapors
and liquids in the vicinity of this or
any other appliance.**

© Copyright 1996, Raytheon Appliances

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the written permission of the publisher.

IMPORTANT SAFETY INSTRUCTIONS

(Save These Instructions)

▲ WARNING

To reduce the risk of fire, electric shock, serious injury or death to persons when using your washer, follow these basic precautions:

1. Read all instructions before using the washer.
2. Refer to the EARTHING INSTRUCTIONS in the INSTALLATION manual for the proper earthing of the washer.
3. Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, other flammable or explosive substances as they give off vapours that could ignite or explode.
4. Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children. This is a safety rule for all appliances.
5. Before the washer is removed from service or discarded, remove the lid to the washing compartment.
6. Do not reach into the washer if the washtub is revolving.
7. Do not install or store the washer where it will be exposed to water and/or weather.
8. Do not tamper with the controls.
9. Do not repair or replace any part of the washer, or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
10. Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
11. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using a washing machine or combination washer-dryer, turn on all hot water taps and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. **THE GAS IS FLAMMABLE, DO NOT SMOKE OR USE AN OPEN FLAME DURING THIS TIME.**
12. To reduce the risk of an electric shock or fire, **DO NOT** use an extension cord or an adapter to connect the washer to the electrical power source.
13. Use your washer only for its intended purpose, washing clothes.
14. **ALWAYS** disconnect the washer from electrical supply before attempting any service. Disconnect the power cord by grasping the plug, not the cord.
15. Install the washer according to the **INSTALLATION INSTRUCTIONS**. All connections for water, drain, electrical power and earthing must comply with local codes and be made by licensed personnel when required. Do not do it yourself unless you know how!
16. To reduce the risk of fire, clothes which have traces of any flammable substances such as vegetable oil, cooking oil, machine oil, flammable chemicals, thinner, etc. must not be put into the washer. These flammable substances may cause the fabric to catch on fire by itself.
17. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
18. Keep your washer in good condition. Bumping or dropping the washer can damage safety features. If this occurs, have your washer checked by a qualified serviceman.
19. Replace worn power cords and/or loose plugs.
20. Be sure water connections have a shut-off valve and that fill hose connections are tight. **CLOSE** the shut-off valves at the end of each wash day.

21. Loading door **MUST BE CLOSED** any time the washer is spinning. **DO NOT** by-pass the loading door switch by permitting the washer to spin with the loading door open. A brake will stop the washtub within seconds if the loading door is opened during spinning. If the washtub does not stop when the loading door is opened, remove the washer from use and call the serviceman.

22. Always read and follow manufacturer's instructions on packages of laundry and cleaning aids. Heed all warnings or precautions. To reduce the risk of poisoning or chemical burns, keep them out of the reach of children at all times (preferably in a locked cabinet).

23. Always follow the fabric care instructions supplied by the garment manufacturer.

24. Never operate the washer with any guards and/or panels removed.

25. **DO NOT** operate the washer with missing or broken parts.

26. **DO NOT** by-pass any safety devices.

27. Failure to install, maintain, and/or operate this machine according to the manufacturer's instructions may result in conditions which can produce bodily injury and/or property damage.

NOTE: The WARNING AND IMPORTANT SAFETY INSTRUCTIONS appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and carefulness are factors which **CANNOT** be built into the washer. These factors **MUST BE** supplied by the person(s) installing, maintaining, or operating the washer.

Always contact your dealer, distributor, service agent or the manufacturer about any problems or conditions you do not understand.

Before Washing . . .

Prepare Wash Load

Empty Pockets and Cuffs

Make sure all pockets are empty and turn them inside out. One bobby pin, metal or plastic toy, nail or sharp object in a load can catch laundry and cause tears. Facial tissue left in a pocket will produce extreme “lint”. A crayon or lipstick in a wash load may cause stains that cannot be removed. Roll down cuffs and shake out grass, sand, and gravel.

Mend Rips and Tears

Little holes can become bigger in the washer. Mend holes and tears before placing garments in the washer.

Close Zipper and Fasten Hooks

These can catch on garments in a wash load and tear them. Tie belts and sashes so they won't wind around clothes.

Remove Nonwashable Trim

 
Check for colourfastness too, by squeezing a portion of garment in warm or hot sudsy water. If the colour bleeds or runs, wash the item separately in cold water.

Sort


Proper sorting is easy if you follow a few guidelines:

1. Sort by Color


Whites




Lights

 

Darks

 


Non-Colourfast

 


W1501E0A

2. Sort by Fabric and Construction

 
Cottons and Linens




Synthetics, Blends & Poly Knits

 

Permanent Press

 


Delicates

 


W3091E0A

3. Sort by Care Label

 
Cold



Warm

 

Hot

 

W3101E0A

4. Sort By Type and Amount of Soil

Children's play clothes, as well as work clothes, will need extra treatment. Lightly soiled clothes can become dingy if washed with heavily soiled items.

5. Sort Lint “Shedders” From Lint “Receivers”

Some fabrics attract lint and should not be washed with lint-shedding loads. Lint shedders are cottons, terry towels, chenille bedspreads, rugs, and clothes which have been heavily bleached.

Lint receivers are synthetics, permanent or durable press, knits (including socks), corduroy, and other smooth fabrics.

Pretreat


Pretreat shirt collars and cuffs with a pre-wash product or liquid detergent when placing them in the washer. Before washing, treat special stains with bar soap, liquid detergent or a paste of water and granular detergent. Use a pretreat soil and stain remover.

Loading the Washer . . .

Load Articles

Load items by the amount of space they take up, not by their weight. Mix large and small items in a load to get the best washing results.

Drop items loosely into the washtub. The bulk of the clothes rather than the weight will determine load size. Do not pack items in or wrap them around the agitator. Overloading can cause poor cleaning, excessive wrinkling, and tears.

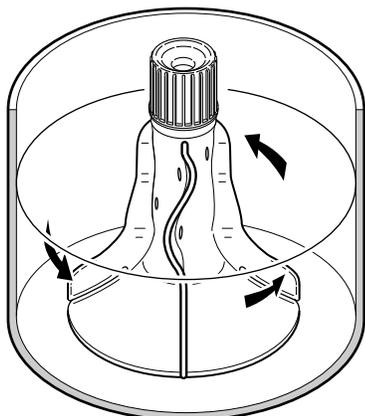

W280IE0A

Items should move freely through the wash water for best cleaning results. Items should rollover — sink and then reappear.

When washing very large items, do not fill washtub as full as with other loads.

Load Sizes

Small

6-7 perm. press shirts
OR
2 twin sheets, 2 pillow cases
OR
8 bath towels, 6 bath cloths

Medium

10-11 perm. press shirts
OR
2 full size sheets, 2 pillow cases,
2 pair men's pyjamas
OR
12 bath towels, 4 hand towels,
4 wash cloths

Large

8-9 shirts and
5 pair polyester pants
OR
2 queen size sheets,
4 pillow cases, 2 nightgowns
1 pair men's pyjamas
OR
1 queen size bedspread

Reset

Use the RESET if agitation has started and more water is needed for the load.

Water Level

Right



W281IE0 A

Wrong



W282IE1A

The water level in your washer should fit the size of your wash load. Small loads will use lower water levels. There must be enough water in the washtub to allow items to move and turn over freely.

Overloading the washtub can result in poor washing and rinsing. Overloading may also cause wrinkling and tearing of items.

IMPORTANT: If in doubt always use a higher water level. Most average loads will require water setting of Large. Failure to have the correct volume of water relative to the load will increase the incidence of excessive lint.

Water . . .

Water Hardness



Soft Water
0 to 10 milligrams
per litre



**Moderately Hard
Water**
300 milligrams
per litre



Hard Water
500 milligrams
per litre



Very Hard Water
Over 500 milligrams
per litre

W1201E0D

Water hardness is measured in grains per gallon (G.P.G.) or parts per million (P.P.M.). To learn your water hardness, call your Water Department or State Extension Service. Hard water will not remove soil as well as soft water and can result in grey, dingy laundry. To get clothes clean in hard water, use more detergent. Do not use soap.

Hard Water May Be Softened By:

1. A mechanical water softener installed in your home.
2. The use of a packaged non-precipitating water conditioner.

Soft Water

Water should be soft enough to allow soaps and detergents to remove soil effectively. Clothes will be whiter and brighter when washed and rinsed in soft water.

Iron

If iron is present in the water, the clothes may become an all-over yellow or they may be stained with brown or orange spots or streaks. Iron is not always visible in the water.

Solutions to Iron Problems

The installation of a water softener will remove small amounts of iron from the water supply. The installation of an iron filter may be necessary for more severe cases. If the iron comes from the pipes, it may be sufficient just to let the water run into the empty washer for about one minute. This may help to clear the pipes. Spin this water out of the washtub before starting the wash.

If iron comes from the water heater, drain the heater occasionally to remove the rust.

If the Iron Condition Cannot Be Corrected

Prepare the wash water first by adding detergent (not soap), then add the clothes to the washtub. Use a phosphate detergent. The phosphate content of a detergent is listed on the package side panel.

Add a nonprecipitating water conditioner to the washtub just before the rinse water enters. Do not use fabric softener in the rinse water if a packaged water conditioner is used.

Iron With Chlorine Bleach

The use of chlorine bleach with water that contains iron will make the rust discoloration worse. Use an "all fabric" bleach.

Wash Temperature

Hot Water

Hot water will give the best results of cleaning and sanitizing, but it is not suitable for all items. It is best for sturdy whites and colourfast items, heavily soiled items and nappies.

Warm Water

By using warm water, there is less chance of colour loss in items. Warm water also reduces wrinkling in permanent press items. Use with light and moderate soils, non-colourfast or dark colours, permanent press, silks, woollens, nylon, and acrylic.


Cold Water

Cold water is less effective in cleaning than hot or warm water, but it does minimize wrinkling and colour fading. Use it for washing extra-sensitive clothes and for the rinsing of all fabrics.

Energy

You can save energy when washing by following a few guidelines:

1. Heating water accounts for the greatest energy expense when washing. Save on heating water by using cold rinses.
2. Wash full loads, but do not overload.
3. Use soak cycles for heavily soiled items to reduce wash times.
4. Select a shorter wash time for lightly soiled items.

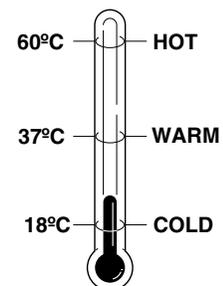

W1211E0F

Laundry Tips . . .

Laundry Aids	Use	Comments
Soak/Pretreat Products	<ul style="list-style-type: none"> • Use a soaking agent either during the soak cycle or overnight to remove stains and soils. • Always follow manufacturer's instructions with any pretreatment product. 	<ul style="list-style-type: none"> • Do not use a soaking agent with chlorine bleach. • Do not use pretreaters around the washer or dryer control panel. They may harm the finish or panel markings.
Detergents/ Soaps	<ul style="list-style-type: none"> • You may use detergent or soap in your washer. The determining factor is the hardness of the water. Always use detergent if the water is over three grains hard. 	<ul style="list-style-type: none"> • Soap and nonphosphate powdered detergents will not give good water. Soap in hard water will form sticky deposits. • The use of powdered soap is not recommended when washing in cold water.
Bleaches	<ul style="list-style-type: none"> • Use to remove certain stains, disinfect, and keep clothes white. • Use bleach in the wash water only. Do not use bleach in the rinse. • Follow directions on care label of garment. • Bleach should not be used as a substitute for detergent. Use the recommended amount of bleach. 	<ul style="list-style-type: none"> • When using liquid chlorine bleach, always use the bleach dispenser. • Always measure the bleach. Never exceed one cup of bleach per full load. • Never use chlorine bleach and ammonia in the same wash cycle.
Fabric Softeners	<ul style="list-style-type: none"> • Use to soften clothes and remove static electricity from permanent press knits and other fabrics of man-made fibres. • Use the fabric softener dispenser on your machine. Follow bottle directions carefully. 	<ul style="list-style-type: none"> • Undiluted fabric softener poured directly on clothes can stain them. • Do not mix with detergent or bleach.
Water Conditioners Non-Precipitating Type Precipitating Type	<ul style="list-style-type: none"> • These products soften water by tying up the hardness minerals. Recommended if using soap with water over three grains hard, or when using nonphosphate detergents. • These products settle out hardness minerals by converting them into particles that will not dissolve in the water. If used with nonphosphate detergent or soap in hard water, a deposit may form on the clothes and washer parts. 	<ul style="list-style-type: none"> • Do not use with nonphosphate detergents or soaps.

Washing Temperature Guide . . .

Water Temperature	Use For	Comments
HOT (approx. 60° C)	<ul style="list-style-type: none"> • Sturdy whites and colourfast items. • Work clothes. • Soiled items. • Nappies. 	<ul style="list-style-type: none"> • Best cleaning for heavily soiled items. • Helps remove wrinkles from permanent press.
WARM (approx. 37° C)	<ul style="list-style-type: none"> • Light and moderately soiled items. • Non-colourfast or dark colors. • Permanent press. • Silks, woollens, nylon, acrylic. 	<ul style="list-style-type: none"> • Reduces wrinkling. Less fading.
COLD (approx. 18° C)	<ul style="list-style-type: none"> • Rinsing of all items. • Non-colourfast fabrics. • Extra sensitive clothing. 	<ul style="list-style-type: none"> • Saves energy. Reduces colour fading.

Bleach Dispenser

The bleach dispenser is located in the left front corner, under the loading door.

Use liquid bleach in the dispenser.

Use no more than one cup chlorine bleach for large loads, three-quarters cup for medium and one-half cup for small loads.

Carefully pour recommended amount of bleach into the dispenser during the first fill of the washer.

Be careful not to spill undiluted bleach. It is a strong chemical and can damage some fabrics if it is not properly diluted.

Powdered bleach must not be used in the bleach dispenser. Add powdered bleach to the wash water.

Fabric Softener Dispenser and Agitator

To Use Dispenser

After the clothes are loaded into the washtub and before the start of the WASH CYCLE, pour the proper amount of liquid fabric softener into the bottle measuring cap (see bottle directions). Pour into dispenser.

The large fabric softener dispenser allows for the fabric softener to be diluted with water. We recommend adding water up to the fill level. Do not exceed tip of arrow which indicates correct fill level. Over-filling can allow fabric softener to spill onto the clothes.

Setting the water level to medium or higher will result in better performance from the fabric softener.

The fabric softener will remain in the dispenser during the wash fill, agitation and spin. At the end of the wash spin, the liquid fabric softener will be dispensed into the washtub through the slots in the agitator and will be mixed with the incoming rinse water.

To Clean The Dispenser


Remove the dispenser housing from agitator by squeezing the lower part of the dispenser, pulling directly upward and at the same time tilting slightly. This will expose the dispenser cup, which is also removable for cleaning (refer to illustration). Both housing and cup can be soaked in hot soapy water and rinsed clean. The funnel shape in top of agitator also needs to be cleaned. The hole and the slots in the two rings will require using a small brush for proper cleaning.

After cleaning, install dispenser cup, then push dispenser housing directly downward onto top of agitator until firmly snapped together.

Use Tips

- Fabric softener spilled onto garments may cause staining. To remove, soak in a soapy solution made with Sard Wonder Soap or rub the stain with a bar of Sard, then wash.
- Liquid fabric softeners will be dispensed during the final rinse and should not be combined with bleach, bluing, starch, detergents, soaps or packaged water conditioners during this rinse.
- Fabric softener is not to be used in dispenser when using Soak/Prewash cycle.
- When adding detergent to wash water, do not allow any to enter into softener dispenser cup, as softener will become gummy.

To prevent softener buildup, the dispenser can be filled with clean water for automatic cleaning. This can be done in washing cycles other than when softener is used.

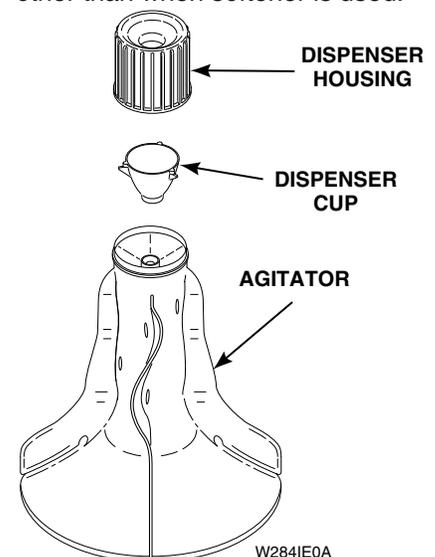

How To Use Your Washer . . .

Operation Instructions

▲ WARNING

To reduce the risk of fire, electric shock, serious injury or death to persons, read the **IMPORTANT SAFETY INSTRUCTIONS, Pages 3 and 4, before operating the washer.**

Determine Proper Cycle

Regular

Use for sturdy items, like play or work clothes, towels, T-shirts, etc. The wash time selection will depend on the type of fabric and the amount of soil. For the best results when cleaning heavily soiled items, use a longer wash time (15 minutes maximum). Lightly soiled items require less wash time.

Permanent Press/Knits

Use for permanent press items and synthetics. The wash time selection will depend upon the type of fabric and amount of soil. The PERMANENT PRESS/KNITS cycle automatically cools the temperature of the fibres before the spin. After wash the agitation stops, the washtub spins slowly, partially drains and then stops. Cold water will then be automatically added to the washtub until the proper water level is reached. This happens one or two times, depending on the size of the load and type of drain connection. When the COOL DOWN is complete, the washer will pause for approximately one minute before continuing the cycle.

Soak/Prewash (With Options switch OFF)

Use for heavily soiled or stained clothing. Turn timer knob to the beginning of the SOAK/PREWASH cycle. Pull timer knob out to start the water fill. Add detergent to the washtub, then place the load into the tub. Close lid. After fill is completed, agitation will begin. This cycle has alternate periods of agitation and soaking. After the soak/agitation period is over the washer will go into an infinite pause and remain there. Do not leave clothes sit in washer overnight. To complete the cycle, manually advance the timer to spin. After spin, select appropriate cycle and pull timer out to start the water fill. Once the water mixes with the clothes, add detergent.

Soak/Prewash (Using the Options switch)

See Options on Page 11.

Delicates/Woollens

Use this cycle to wash delicates and machine washable woollens. A full tub of warm water is recommended (even for small loads) to allow these items to move freely through the water. More water helps reduce fabric wear, wrinkling, and provides for a clean wash. (See Page 12 for further details).

Both wash and spin actions are at slow speed.

Super Wash

Use this cycle for very heavily soiled or stained clothing. This cycle will go through the Soak/Prewash, Regular and Extra Rinse cycles. The option switch must be on Super Wash for this cycle.

Extra Rinse

Use this cycle for items you would like to have rinsed only. The washtub will fill to the level you have selected on the LOAD SIZE control. Washer will agitate for five minutes, pause for two minutes and 19 seconds and will spin for seven minutes.


To Wash Clothes

IMPORTANT: Before using your new washer, make sure the washer cord is plugged into a 240 Volt electrical outlet that has the proper earthing and polarity, that the washer hoses are connected to the hot and cold water taps, and that the taps are turned on. Be sure the drain hose is not kinked and is inserted into a drain. See the INSTALLATION INSTRUCTIONS for details of proper washer installation.

1. Get the clothes ready for washing. Empty pockets and cuffs. Sort items into separate loads. Pretreat stains and heavily soiled areas.
 2. Measure and add detergent to the washtub after the water level has exceeded two inches.
 3. Add clothes loosely into the washtub.
 4. Close the loading door. The washer will not spin with the loading door open.
5. Set WASH/RINSE temperatures.


▲ WARNING

DO NOT by-pass the loading door switch by permitting the washer to spin with the loading door open.

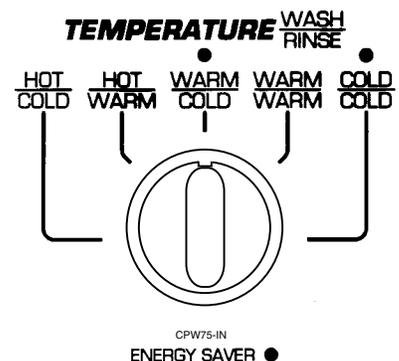

NOTE: The washer will provide a cold rinse in all TEMPERATURE settings except in positions marked HOT wash WARM rinse or WARM wash WARM rinse. DO NOT use a warm rinse with permanent press or other synthetic fabrics. A warm rinse can cause wrinkling in some garments. Cold rinses will save you money and energy and will help reduce wrinkling in permanent press and synthetics.

- Set LOAD SIZE (WATER LEVEL) control. Use RESET if agitation has started and more water is needed.

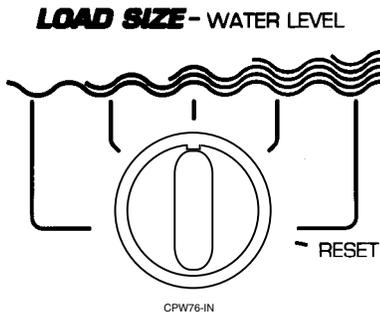

IMPORTANT: Holding the LOAD SIZE (WATER LEVEL) control in the RESET position can cause flooding of the washer.

- Select the cycle according to the type of fabric being washed. Push the timer knob in and turn clockwise to the desired cycle and wash time.

- Pull the timer knob out to start the water fill. Agitation will begin when the water reaches the level you selected.

The washer will stop (pause) for approximately two minutes before the wash and rinse spins. Do not turn the timer through these pauses. They are part of the cycle.

Timer

Although the washer cycles are automatic, the timer may be reset to lengthen, shorten, or repeat a portion of a cycle.

To set or reset the timer, push timer knob in to stop the washer. Hold timer knob in firmly while turning it clockwise to the setting desired. Pull timer knob out to start the washer.

Options

Prewash

Use for heavily soiled or stained clothing. When the PREWASH setting is selected, the washer will automatically go through the SOAK/PREWASH and the REGULAR cycle. First, add detergent into the wash tub, then place the wash load into the tub. Fill softener dispenser in agitator with liquid detergent diluted with water.

IMPORTANT: Dispenser must be cleaned before and after using detergent. Refer to dispenser cleaning section, Page 9.

Extra Rinse

Use for heavy clothing such as denim, towels, etc., where an additional deep rinse may be desired. When the EXTRA RINSE setting is selected, the washer will automatically go through the REGULAR cycle and a second deep RINSE cycle.



Drip Dry

Use this setting for clothing you want to remove from the washer very wet. In this setting the washer will drain the water out but not spin.

If certain items need to be spun out, return the OPTIONS switch to the OFF position and the cycle will progress through the final spin. There is no need to advance the timer knob.

Super Wash

This setting is a combination of the PREWASH and the EXTRA RINSE cycles. When the SUPER WASH setting is selected, the washer will automatically go through the SOAK/PREWASH, REGULAR, and EXTRA RINSE cycles. First, add detergent into the wash tub, then place the wash load into the wash tub. Fill softener dispenser in agitator with liquid detergent diluted with water.

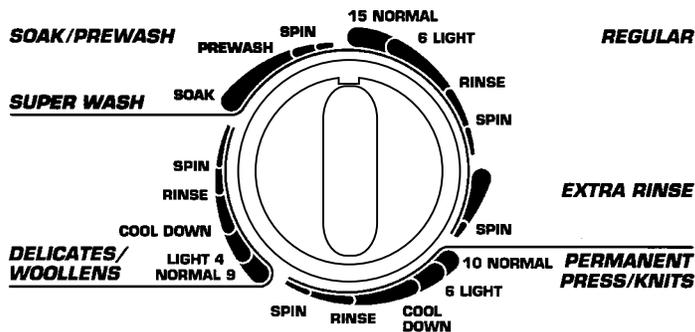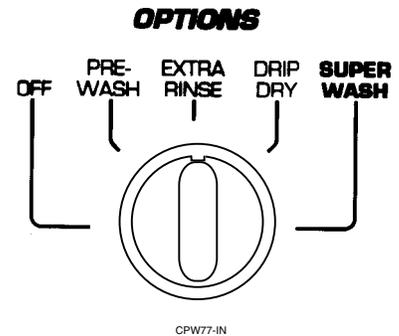

FULL KNOB TO START - PUSH TO STOP

CPW78-IN

Special Care . . .

Starching

Starching adds crispness and body to fabrics, enhances soil resistance, and makes ironing easier. There are several types of starches. Carefully follow label directions for spray or hand starching or starching in the washer.

Knits

A variety of knits are being used for many types of clothing and household furnishings. Many knits are machine washable, some are hand washable, and some must be dry-cleaned. When buying, make sure the garment has a care label with care instructions. These directions must be followed. Some knits are stretched during their manufacture and may shrink or relax when exposed to water.

Cotton Knits

Unless the label indicates that it is preshrunk, cotton knits will probably shrink to some degree. Overdrying contributes to shrinkage of cotton knits.

Wash water should be hot or warm suitable for colour and soil. The rinse water should be cold.

Rayon Knits

Rayon stretches and shrinks easily. Treat as a delicate fabric and wash gently.

Synthetic Fibre Knits

Knits made from synthetic fibres or blends containing a high percentage of synthetics will generally keep their shape. When buying, make sure the trimmings (including belts) are machine washable, seams are not puckered, and zippers and trimmings are well fastened.

Knits of Man-Made Fibres

In general, follow the rules for permanent press fabrics as they tend to have the same characteristics. Set machine to PERMANENT PRESS cycle. Set the wash water warm, or suitable for colour and soil. Rinse water should be cold. Do not wash with lint-shedding fabrics. Separate items for colour, washing whites separately.

Sweaters of Man-Made Fibres

Follow directions for knits. Button sweaters and turn inside out. The ribbon behind the buttons and button holes may shrink. Stretch to shape after washing. Orlon sweaters may stretch. Avoid pulling them when wet. Dryer dry.

Woollens

The Delicates/Woollens cycle on your Kleenmaid is specially designed for machine washable woollens. Follow these guidelines for woollens.

- Check the care label on all garments — follow its instructions. Never wash woollens in your machine which doesn't have a MACHINE WASHABLE label.
- Select the DELICATES/ WOOLLENS cycle, set water level to LARGE and WASH/ RINSE Temp. to WARM/ WARM. Don't overload — woollens (in particular) need freedom to tumble in plenty of water.
- Choose a mild detergent recommended for washing wool.
- Dry woollens by lying them flat on a towel. Ease them back into original shape and size while still wet. Avoid direct sunlight.

Delicates

The Kleenmaid Delicates/ Woollens cycle provides not only a gentle (slow) agitator action, it also pauses frequently to avoid tangling fine and delicate garments. Nonetheless, it is recommended that you take the extra care of placing your most delicate items (e.g. lace) inside a washing bag.

Permanent Press

Permanent or durable press garments and household items will usually not need pressing when washed and dried properly. However, some will be more wrinkle resistant than others.

The care needed for permanent press is a little different than for cottons. Permanent press will soften or become pliable when heated. This softening when it is in warm or hot wash water will allow wear wrinkles to be removed. It will also cause the fabric to wrinkle if it is crushed, squeezed or spun when hot.

Permanent press cycles of washers, when washer controls are properly set, will cool the clothes before the wash spin to avoid wrinkling.

How To Wash Permanent Press

1. Wash often. Permanent press clothes tend to look clean even when they should be washed.
2. Sort loads correctly, refer to Page 5.
3. Do not wash with lint-shedding loads. Permanent press attracts lint in the wash water.
4. Pre-treat grease stains and oily areas. This is especially important for shirt collars and cuffs. Rub liquid detergent or a paste of detergent into the area.
5. Use the PERMANENT PRESS/KNITS cycle, hot or warm water, cold rinse, agitation and spin speed suitable for fabric and sufficient detergent.
6. Use fabric softener in the rinse water. This will reduce the static electricity which attracts lint and makes garments cling.

To Dry Permanent Press

For best results, permanent press must be dryer dried. See garment care labels.

Washing Special Items . . .

Always Follow Manufacturer's Care Label Instructions

Bedding	<ul style="list-style-type: none"> • Warm wash and rinse. • PERMANENT PRESS/KNITS cycle. • Pretreat heavily soiled areas before washing. • When washing an electric blanket, protect the plug by stitching the edge of the blanket over the plug. Only dryer dry if manufacturer says it can be done.
Nappies	<ul style="list-style-type: none"> • Rinse out nappies immediately in cold water and soak in a nappies pail with a small amount of detergent or enzyme presoak. Soak before washing. • Limit wash load to two dozen nappies. • Recommend an all-purpose detergent.
Draperies, Curtains, Slip Covers	<ul style="list-style-type: none"> • Shake to remove dust. Remove hooks and close zippers. • Sun-damaged draperies and curtains will not withstand washing. • Use warm water. • Wash curtains frequently. They can be weakened from soil, fumes, dust, and the sun. • Fibreglass curtains need gentle care. Read care label to see if washable. Some fibreglass curtains should be hand washed.
Pillows (Feather and down)	<ul style="list-style-type: none"> • Do not wash pillows unless they can be dryer dried. They may mildew if not dried completely. • Wash two pillows at a time or add towels for balance. • Use warm wash and detergent.
Rugs	<ul style="list-style-type: none"> • Shake before washing. Do not use hot water on rubber-backed rugs. • Wash two or three rugs to balance the washer. • Fabric softener in the rinse will help eliminate static.
Slips and Gowns	<ul style="list-style-type: none"> • Wash often using all-purpose detergent, warm or hot water and a cold rinse on the PERMANENT PRESS/KNITS cycle. • To keep nylons and polyesters white, wash only with whites and use chlorine bleach occasionally. • Use fabric softener in the rinse to remove static electricity.

Washing Problems . . .

To keep clothes looking white or bright, use good washing practices at all times to prevent a gradual build-up of soil or water hardness minerals on them. If you notice that your clothes are not as bright as they should be, take corrective measures immediately.

Problem	Cause	Solution
Grey or Dingy Clothes	Insufficient Detergent	Add more detergent to washtub before loading clothes. Mild detergents are not suitable for average soil.
	Improper Sorting	Wash whites separately. Separate light from heavily soiled items. Clothes can pick up soil from dirty wash water.
	Nonphosphate Detergent and Hard Water	Follow package directions. Soften water if possible.
	Water Not Hot Enough	White clothes will stay whiter with hot wash water. Increase temperature.
	Overcrowding Washer	Clothes must circulate freely through the water for best results.
Yellowed Clothes	Unremoved Soil	Skin soil is hard to remove. Check hem edge of sheets and pillowcases, bottom end of t-shirts, etc. If this portion is white and center is yellow, the fabric contains unremoved soil. Use sufficient detergent and a hot wash. Chlorine bleach may be needed.
	Clothes Stained From Iron In The Water	To test if an iron stain, use a rust remover on a portion of the garment. Follow bottle directions for larger items.
	Older Clothes	Some white fabrics turn yellow with age and cannot be whitened.
Clothes Tearing or Damage	Improper Use of Chlorine Bleach	No correction for bleach damaged clothes. Always measure and dilute bleach.
	Overcrowding or Overloading	Make sure all items can move freely during agitation.
	Insufficient Precare	Fasten all hooks and zippers. Mend tears. Remove objects from pockets.
Excessive Lint	Improper Sorting	Fabrics which shed lint cannot be washed with fabrics that receive lint.
	Insufficient Detergent	Use enough detergent so that lint remains suspended in water and flushed out.
	Mixing Fabric Types	Knits and Permanent Press attract lint. Wash these only with similar items. Use fabric softener in rinse water.
	Insufficient Water Level	Select proper/higher water level for size of wash load.

Stain Removal . . .

Many soils will not become stains if treated promptly. Older stains may be difficult or impossible to remove. Hot water will set some stains, particularly protein based stains. Use cold or warm water on these before washing in hot water.

▲ WARNING

Never put highly flammable substances like gasoline, kerosene, waxes, vegetable oils, cooking oils, etc. into a washer or dryer. Never put articles that have been cleaned with such substances into a washer or dryer. Failure to comply with these warnings could result in a fire, explosion, and/or severe burns or death. All items with these substances on them should be thoroughly hand-washed with a detergent so that no trace of the flammable substances remains. The articles can then be machine washed and/or dried.

When using any kind of a dry-cleaning fluid, follow the manufacturer's recommendations. The fumes should never be inhaled. Use in a well ventilated room away from sparks and flames. Air dry before washing or drying. Dry-cleaning fluid may cause a "ring" to be formed on some permanent press fabrics. This will not wash out. To remove, clean the garment in a coin-operated dry-cleaning unit, or by a professional dry-cleaner.

Stain	Treatment
Adhesive Tape	Place face down on paper towels and sponge with a dry-cleaning solvent (see WARNING above). Launder.
Airplane Glue	Place face down on paper towels and sponge with fingernail polish remover until stain dissolves. Launder.
Alcoholic Beverages	Sponge stain immediately with cold water or soak stain 30 minutes in cold water. Apply detergent to any trace of stain while still wet. If safe for the fabric, launder in hot water using chlorine bleach.
Blood	Treat stain immediately. Soak 30 minutes or more in cold water. Rub detergent into stain. If stain persists, place a small amount of household ammonia on the stain and rub again with detergent. If safe for fabric, launder in hot water and chlorine bleach if traces of the stain persist.
Candlewax	Rub with ice and scrape off excess wax. Place stain between paper towels and press with warm iron. Then place stain face down on paper towels and sponge with dry-cleaning solvent (see WARNING above). Let dry, launder. If traces of colour remain, launder with a commercial colour remover or if safe for the fabric, hot water and chlorine bleach.
Chewing Gum	Rub with ice and scrape off excess gum. Place face down on paper towels and sponge with a dry-cleaning solvent.
Cocoa or Chocolate	Soak in cold water. Rub detergent into stain, rinse. If greasy stain remains, sponge face down on paper towels with a dry-cleaning solvent. If traces of the stain remains, launder in hot water and chlorine bleach (if safe for fabric).
Coffee, Tea	Soak in cold water. Rub detergent into stain, rinse. If traces of the stain remain, launder in hot water with chlorine bleach (if safe for fabric).
Crayon	Treat the same as candle wax (above) or wash in hot water (if safe for fabric) using soap (not a detergent) and 1-2 cups baking soda. If stains remain, professional dry-cleaning may be necessary.

(continued)

Stain	Treatment
Deodorants and Anti-Perspirants	Some of these products contain substances that can change the colour of some dyes. The colour can sometimes be restored if the area is sponged with ammonia then rinsed. To remove stains, apply white vinegar. Rub, rinse. If stains remain, rub detergent into stain and launder with hot water and chlorine bleach (if safe for fabric).
Dye	Treat with a commercial dye remover (Rit, Putnam) or if safe for fabric, bleach with chlorine bleach.
Egg	If dried, scrape off excess. Soak in cold water. Rub detergent into damp stain and if safe for fabric, launder in hot water and chlorine bleach.
Fabric Softener	Dampen stain and rub with bar soap. Launder as usual.
Fruit Juices	Soak in cold water. Launder in hot water with chlorine bleach (if safe for fabric).
Grease, Oil	Place face down on paper towel and sponge with dry-cleaning fluid (see WARNING on Page 15). Dampen stain with water and rub with bar soap or detergent. Launder in hot water (if safe for fabric).
Ink	Saturate the stain with hair spray or place the fabric face down on paper towel and sponge with cleaning fluid or rubbing alcohol (see WARNING on Page 15). Rinse. If traces of the stain remain, rub detergent into the dampened stain and launder. Some inks may be impossible to remove.
Iodine	Rinse from the back side of the stain with cold water. Then soak in a commercial colour remover (Rit, Putnam, etc.) or rub in a paste of water and starch. Let stand for 15-30 minutes and launder.
Ketchup, Tomato-Based Products	Scrape off excess. Soak in cold water 30 minutes. Rub detergent into the stain and if safe for fabric, launder in hot water and chlorine bleach.
Lipstick	Place on paper towel and sponge with cleaning fluid (see WARNING on Page 15). Rinse. Rub dampened stain with bar soap and launder.
Mildew	Treat promptly. Mildew damages fabric and sometimes cannot be removed. Launder with chlorine bleach. For items that cannot be washed with chlorine bleach, soak in an all-fabric bleach, then launder.
Milk and Milk Products	Soak in cold water. Launder in hot water and chlorine bleach (if safe for fabric). Sponge with a cleaning fluid (see WARNING on Page 15), if a stain is noticeable. Rewash.
Miscellaneous Eye and Face Make-up, Tar, Gravy, Felt-Tip Marker, Pitch, Typewriter Ribbon	(A) Place stain side down on paper towel and sponge with dry-cleaning fluid (see WARNING on Page 15). (B) Apply dry spotter (one part mineral water and eight parts dry-cleaning solvent). Use a spoon to loosen stain. Keep stain moist with dry spotter and blot occasionally with toweling. Continue until stain is removed. Allow to dry completely, rinse in warm water, and launder as usual.
Mud	Scrape off excess. Soak in solution of one quart warm water, half teaspoon liquid hand dishwashing detergent and one tablespoon vinegar for 15 minutes. Rinse. Launder in hot or warm water with enzyme product.
Mustard	Rub dampened stain with bar soap. Launder in hot water and chlorine bleach (if safe for fabric).

Stain	Treatment
Nail Polish	Place face down on paper towel. Sponge with nail polish remover (non-oily) until stain disappears. Launder. Do not use nail polish remover on Acetate or Arnel fabrics.
Paint	Water-based — Treat by rinsing fabric in cool water while stains are still wet. Then launder. Dried paint cannot be removed. Oil-based — Pretreat with a solvent recommended on the paint container. If not available, use mineral spirits. Rinse. Pretreat with a stain remover or detergent, rinse and launder.
Perspiration	Rub dampened stain with detergent. Launder in hot water and chlorine bleach (if safe for fabric). If the fabric is discoloured, you can try to restore it by treating fresh stains with ammonia or old stains with vinegar.
Rust	Apply a commercial rust remover (Whink, Rit, RoVer, etc.) Follow manufacturer's directions. Then launder as usual.
Scorching	Launder using hot water and chlorine bleach (if safe for fabric). Fabrics can be damaged by being scorched. If this has happened, you may not be able to remove the marks.
Shoe Polish	Rub dampened stain with detergent. Launder in hot water and chlorine bleach if safe for fabric.
Soft Drinks	Rinse stain with cold water immediately. Launder in warm water and chlorine bleach if safe for fabric.
Tobacco	Dampen stain and rub with bar soap. Rinse. If necessary, soak in an all-fabric bleach solution. If stain remains, launder with chlorine bleach (if safe for fabric).
Urine	Rinse with cold water. Soak with an enzyme soaking product. Launder in hot water with chlorine bleach (if safe for fabric). If the colour of the fabric has changed, sponging the area with ammonia may restore the colour.
Vomit	Soak in a solution of one quart warm water, half teaspoon liquid hand dishwashing detergent, and one tablespoon ammonia (if safe for fabric). Soak 15 minutes. Use sponge to loosen stain. Blot with toweling. Launder in hot water (if safe for fabric) with an enzyme product.

Maintenance . . .

Cold Weather Care

If the washer is delivered on a cold day (below freezing), or is stored in an unheated room or area during the cold months, do not attempt to operate it until the washer has had a chance to warm up.

Care Of Your Washer

IMPORTANT: Before using the washer for the first time, wipe out the inside of the washtub with a sudsy cloth.

Use only a damp or sudsy cloth for cleaning the control panel. Some spray prewash products may harm the finish on the control panel.

Wipe the washer cabinet as needed. If detergent, bleach or other washing products are spilled on the cabinet, wipe immediately. Some products will cause permanent damage if spilled on the cabinet.

Do not use scouring pads or abrasive cleansers.

Do not lay sharp or rough objects on or against the washer. The finish could be damaged.

The washtub will need no particular care though it may need rinsing or wiping after an unusual load has been washed. This also may be necessary if too little detergent has been used.

Leave the loading door open to allow the inside of the washer to dry out after use. This helps prevent musty odors from developing.

Operating Tips . . .

Out-Of-Balance Switch

The out-of-balance switch is located behind the right rear hinge of the washer loading door.

A load of one or two items can make the washtub unbalanced during the spin periods. For the best spinning results, the load must be balanced throughout the spin period.

The out-of-balance switch is tripped if the load becomes excessively unbalanced during the spin. Spinning stops when this happens.

If the out-of-balance switch is tripped, you will need to rearrange the load. To do this, push the timer knob in, open the loading door and evenly distribute the items in the washtub. Close the loading door, pull the timer knob out, and the spin will resume.

Motor Overload Protector . . .

This internal overload protector will stop the motor automatically in the event of an overload. The overload protector will reset itself in two or three minutes and the

motor will restart automatically. If the overload protector stops the motor again, remove the washer from use and call the serviceman to correct the problem.

Before You Call For Service . . .

(You may save time and money by checking the following):

● If Your Washer:


Won't Fill	Fills But Won't Agitate	Won't Spin	Possible Reason — Do This To Correct
●		●	Be sure the power cord is plugged all the way into the electrical outlet.
		●	Close the loading door.
●		●	Check the house fuse or circuit breaker.
●	●	●	Has the motor overload protector cycled?
●			Turn on the hot and cold water faucets.
●		●	Pull timer knob out to start the washer.
●			Was the last spin completed?
●			Clean the filter screens located at the faucet end of the inlet hoses. Owner is responsible for service call regarding cleaning of the screens.
●	●		Water is siphoned from the washer during the cycle. Refer to the INSTALLATION INSTRUCTIONS supplied with the washer.
●	●	●	Are the controls properly set?
	●	●	Broken drive belt. Call the serviceman.

If Service Is Required . . .

If service is required, contact the nearest Kleenmaid Authorized Service Centre.

If you are unable to locate an authorised service centre or are unsatisfied with the service performed on your washer, write to:

Kleenmaid
P.O. Box 5560
Maroochydore South QLD 4558

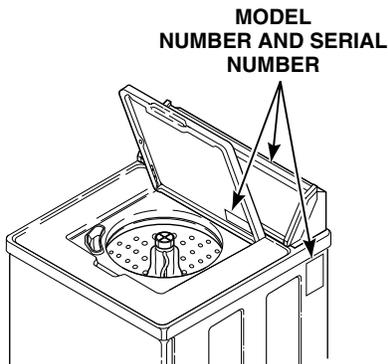

W3341E0B

When calling or writing about your washer, PLEASE GIVE THE MODEL AND SERIAL NUMBERS. The model and serial numbers are located on the nameplate. The nameplate will be in the location shown. Please include a copy of your invoice and any service receipts you have.

Automatic Washer Warranty . . .

Domestic Warranty

Full Five Year Warranty

In addition to all statutory rights which you, the Consumer, have under all the relevant laws in respect of this appliance, during your first five years of ownership as the original purchaser of the Kleenmaid washing machine, we guarantee that any fault caused by faulty material or workmanship, becoming apparent will be rectified free of charge for parts or labour provided that all service is performed during normal working hours by Kleenmaid or their designated Agent. Where the washing machine is installed outside the normal servicing area of the above, the Purchaser must pay the cost of transporting the appliance to and from the Agent or the Agent's traveling cost to and from the Purchaser's home.

Additional Limited Parts Warranty

We will provide a free replacement gearbox should it fail as a result of a defect in material or workmanship during the first 10 years. After the first five years, the Purchaser pays any transport or labour charges.

We will replace the stainless steel tub if it fails as a result of a defect in material or workmanship during the first 20 years. After the first five years, the Purchaser pays any transport or labour charges.

Commercial Warranty

Full One Year Warranty

In addition to all statutory rights which you, the Consumer, have under all the relevant laws in respect of this appliance, during your first one year of ownership as the purchaser of the Kleenmaid washing machine, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts or labour provided that all service is performed during normal working hours by Kleenmaid or their designated Agent. Where the washing machine is installed outside the normal servicing area of the above, the Purchaser must pay the cost of transporting the appliance to and from the Agent or the Agent's traveling cost to and from the Purchaser's home.

Additional Limited Parts Warranty

We will provide a free replacement part should any of the washer cabinet parts (including the top hob, loading lid, and base) rust from the inside out, during the first two years of use. After the first one year, the Purchaser pays any transport or labour charges.

We will provide a free replacement gearbox should it fail as a result of a defect in material or workmanship during the first five years. After the first one year, the Purchaser pays any transport or labour charges.

We will replace the stainless steel tub if it fails as a result of a defect in material or workmanship during the first 10 years. After the first year, the Purchaser pays any transport or labour charges.

What These Warranties Do Not Cover

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes, but is not limited to, abuse, misuse, improper installation, and transportation damage. We are not responsible for any consequential damages resulting from any malfunction.

NOTE: Times listed are approximate.

	CYCLE	FUNCTION	WATER TEMP. SELECT	MOTOR SPEED	TIME (MIN: SEC.)		
WASH	P E R M A N E N T P R E S S	Wash Fill	Hot Warm Cold		Time Will Vary		
COOL-DOWN		Agitate			Fast	Up to 10 mins.	
		Pause				2:20	
		Drain				:30	
		Fill and Pause (Cool-Down)	Cold			2:30	
SPIN		Drain				2:00	
		Spin			Slow	2:10	
RINSE		Rinse Fill		Warm Cold	Fast	Time Will Vary	
		Agitate			Fast	4:00	
SPIN		Drain				2:40	
		Infinite Pause if Drip Dry					
		Drip Dry					
		Spray Rinse	Cold				
		OFF					
WASH		D E L I C A T E S	Wash Fill	Hot Warm Cold		Time Will Vary	
	Agitate				Slow	1:55	
	Pause					2:05	
	Agitate				Slow	:50	
	Pause					1:45	
	Agitate				Slow	:35	
	Pause					2:05	
	Drain					:30	
	COOL-DOWN		Fill and Pause	Warm Cold			2:30
			Drain				2:00
SPIN	Spin				Slow	2:10	
	Pause					:40	
RINSE	Rinse Fill			Warm Cold		Time Will Vary	
	Agitate				Slow	1:40	
	Drain					2:40	
	Infinite Pause if Drip Dry						
SPIN	Drip Dry						
	Spin and Spray	Warm Cold			7:30		
	OFF						

	CYCL	FUNCTION	WATER TEMP. SELECT	MOTOR SPEED	TIME (MIN: SEC.)	
WASH	S O A K	Prewash Fill	Hot Warm Cold		Time Will Vary	
		Agitate		Fast	2:25	
		Pause			5:15	
		Agitate		Fast	1:50	
SOAK	/ P R E W A S H	Pause			5:40	
		Agitate		Fast	1:50	
		Pause			Infinite Unless "Prewash" or "Superwash" Selected	
		Drain			2:00	
SPIN		Spin		Fast	2:10	
	OFF				Will Advance To "Regular" if "Prewash" or "Superwash" Selected	
WASH	R E G U L A R	Wash Fill	Hot Warm Cold		Time Will Vary	
		Agitate		Fast	Up To 15 Mins.	
SPIN		Drain				2:40
		Spin			Fast	2:10
		Pause				:40
RINSE		Rinse Fill	Warm Cold			Time May Vary
		Agitate			Fast	4:07
SPIN		Drain				2:40
		Infinite Pause if Drip Dry				
		Drip Dry				
		Spin			Fast	2:10
		Spray Rinse	Cold			:50
		Spin			Fast	4:30
		OFF				Will Advance To "Extra Rinse" if "Extra Rinse" or "Superwash" Selected
RINSE		E X T R A R I N S E	Rinse Fill	Warm Cold		Time Will Vary
SPIN	Agitate			Fast	4:30	
	Drain				2:40	
	Spin			Fast	4:40	
	OFF					

***NOTE: Time to fill will vary according to local water pressure.**

Kleenmaid - 2 Speed - KAW793

Information For Handy Reference . . .

Kleenmaid
P.O. Box 5560
Maroochydore South QLD 4558

Date Purchased _____

Model Number _____ Serial Number _____

Dealer's Name _____

Dealer's Address _____ Phone Number _____

Service Agency _____

Service Agency Address _____ Phone Number _____

Record this information and keep your sales slip. Model and serial numbers are located on the nameplate.

Customer Service and Information Freecall:

1-800-072-144